

 


Parts Manual

Mfg. No: 19N137-0053-F1


Model Components	Page
Air Cleaner.....	4
Alternator Group.....	6
Blower Housing, Flywheel, Rewind Starter.....	8
Camshaft, Crankcase Cover, Crankshaft, Cylinder, Exhaust Bracket, Operator's Manual, Piston/Rings/Connecting	10
Carburetor.....	14
Controls, Governor Spring.....	16
Cylinder Head, Gasket Sets.....	18
Exhaust System, Fuel Supply.....	20
Replacement Engine - US & Canada.....	22

Not For
Reproduction

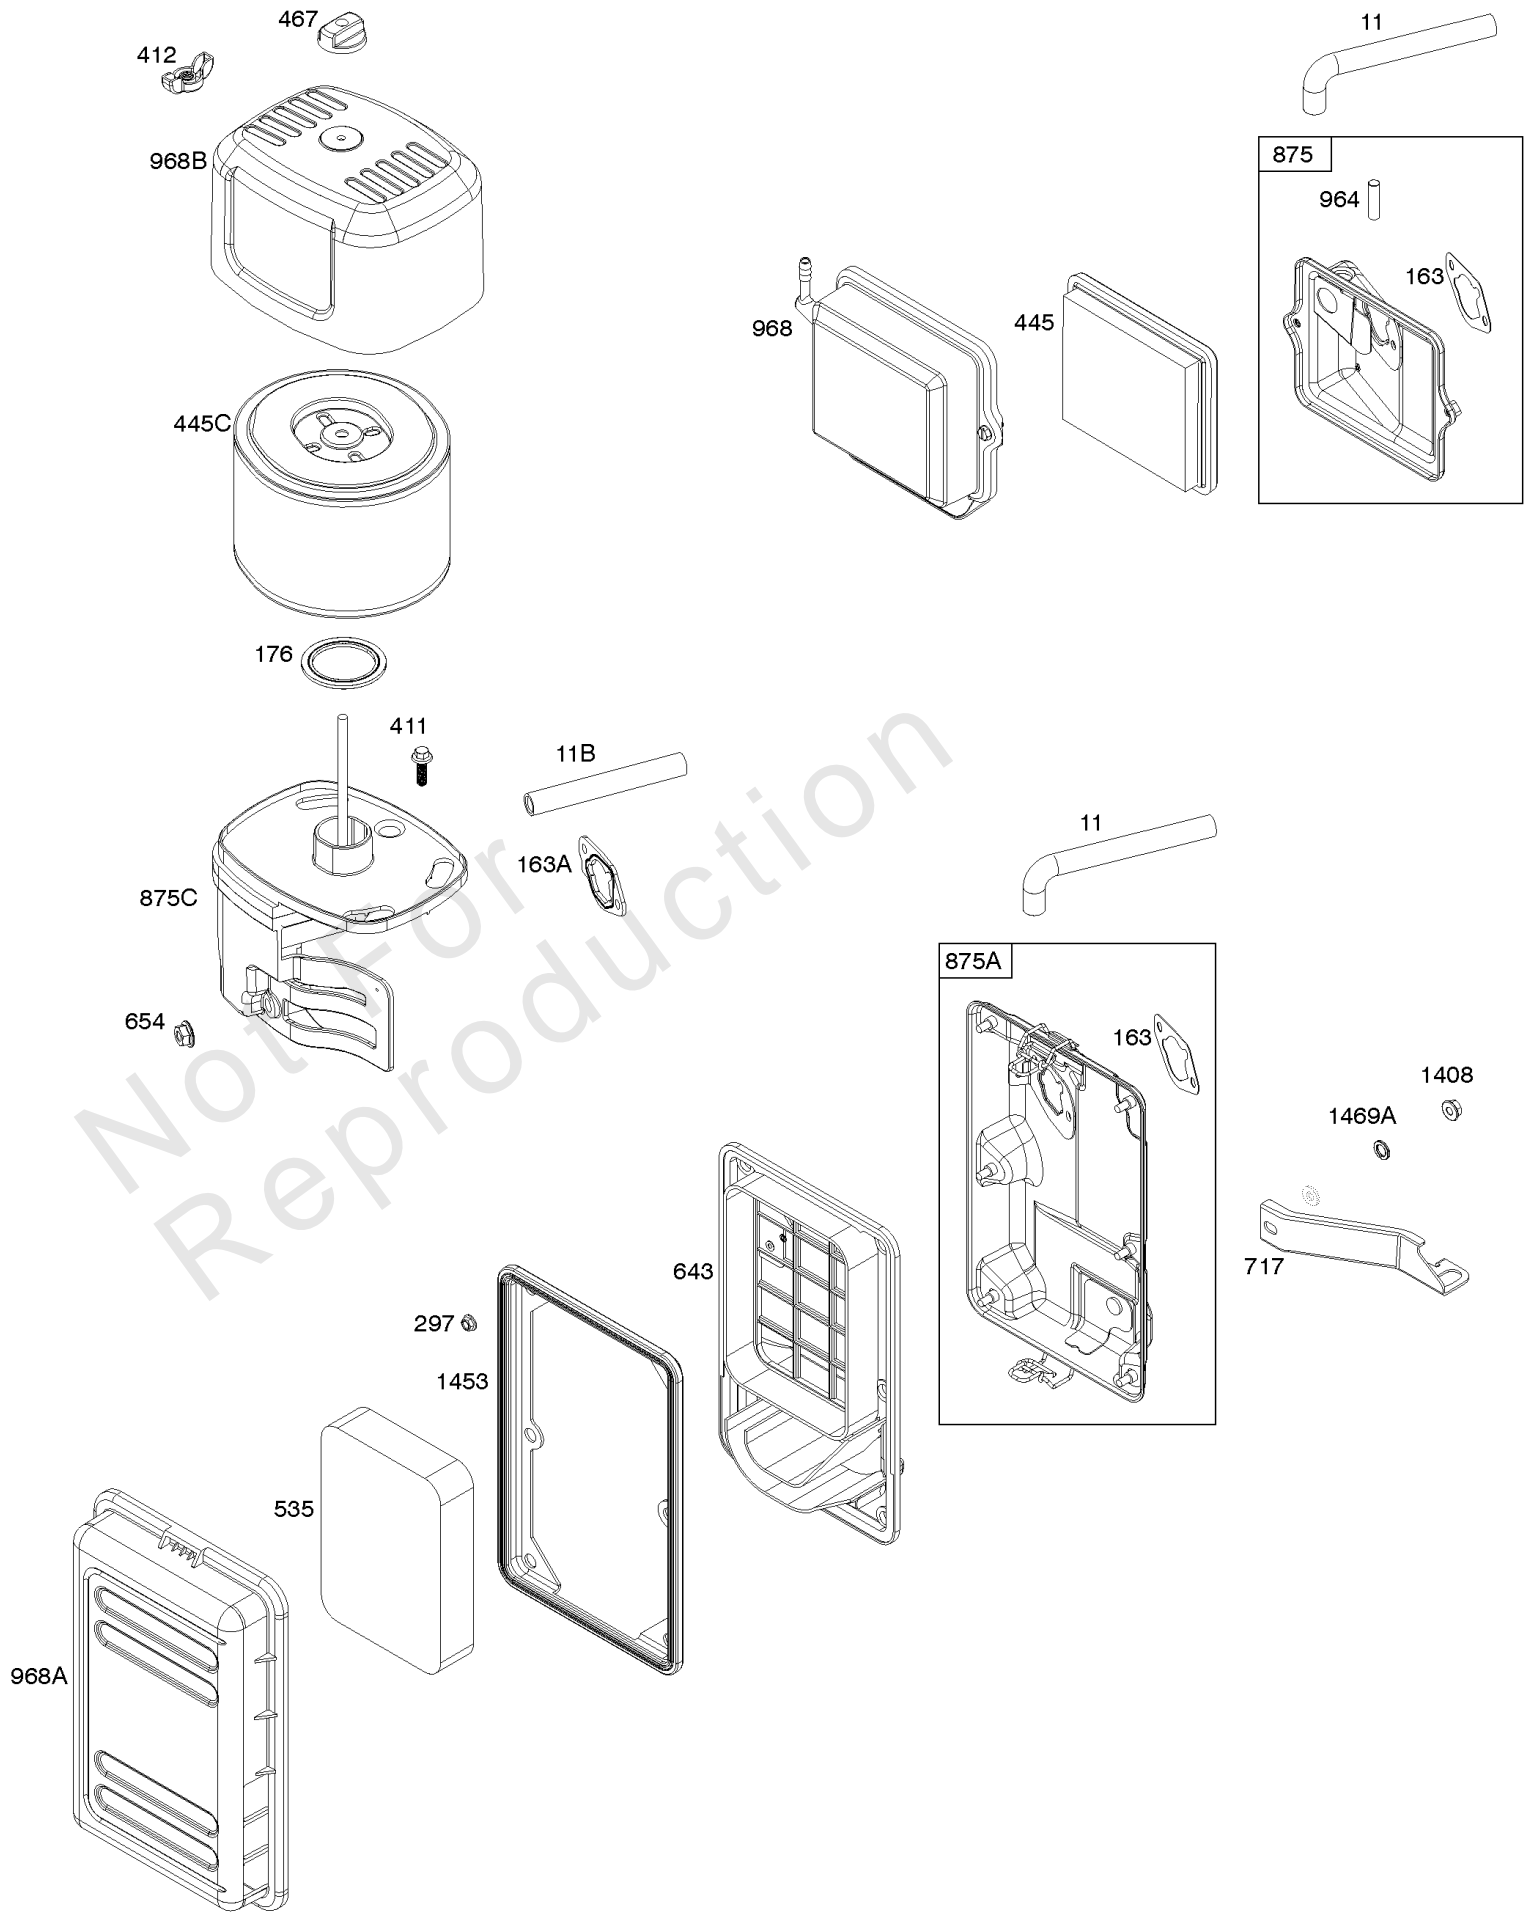



Air Cleaner

REF NO	PART NO	QTY	DESCRIPTION
11	592353		TUBE, Breather
11B	799832		TUBE, Breather -(Cut To Required Length)
163	797756		GASKET, Air Cleaner
163A	799883		GASKET, Air Cleaner
176	799834		SEAL, O-Ring -(Air Cleaner Base)
297	591808		NUT -(Air Filter Retainer)
411	797686		SCREW -(Air Cleaner Base to Air Cleaner Bracket)
412	799830		NUT -(Air Cleaner Cover)
445	491588S		FILTER, A/C Cartridge
445C	592605		FILTER, A/C Cartridge
467	691985		KNOB, Air Cleaner Cover
535	591778		FILTER, Air Cleaner Foam
643	591806		RETAINER, Air Filter
654	690939		NUT -(Carburetor)
717	593134		BRACKET, Air Cleaner
875	799776		BASE, Air Cleaner
875A	591804		BASE, Air Cleaner
875C	593088		BASE, Air Cleaner
964	799159		CAP, Connector
968A	591803		COVER, Air Cleaner
968B	593087		COVER, Air Cleaner
1408	690939		NUT -(Air Cleaner Bracket)
1453	591807		SEAL, Air Cleaner Cover
1469A	22097GS		WASHER, Lock, Split, 1/4" -(Air Cleaner Bracket)

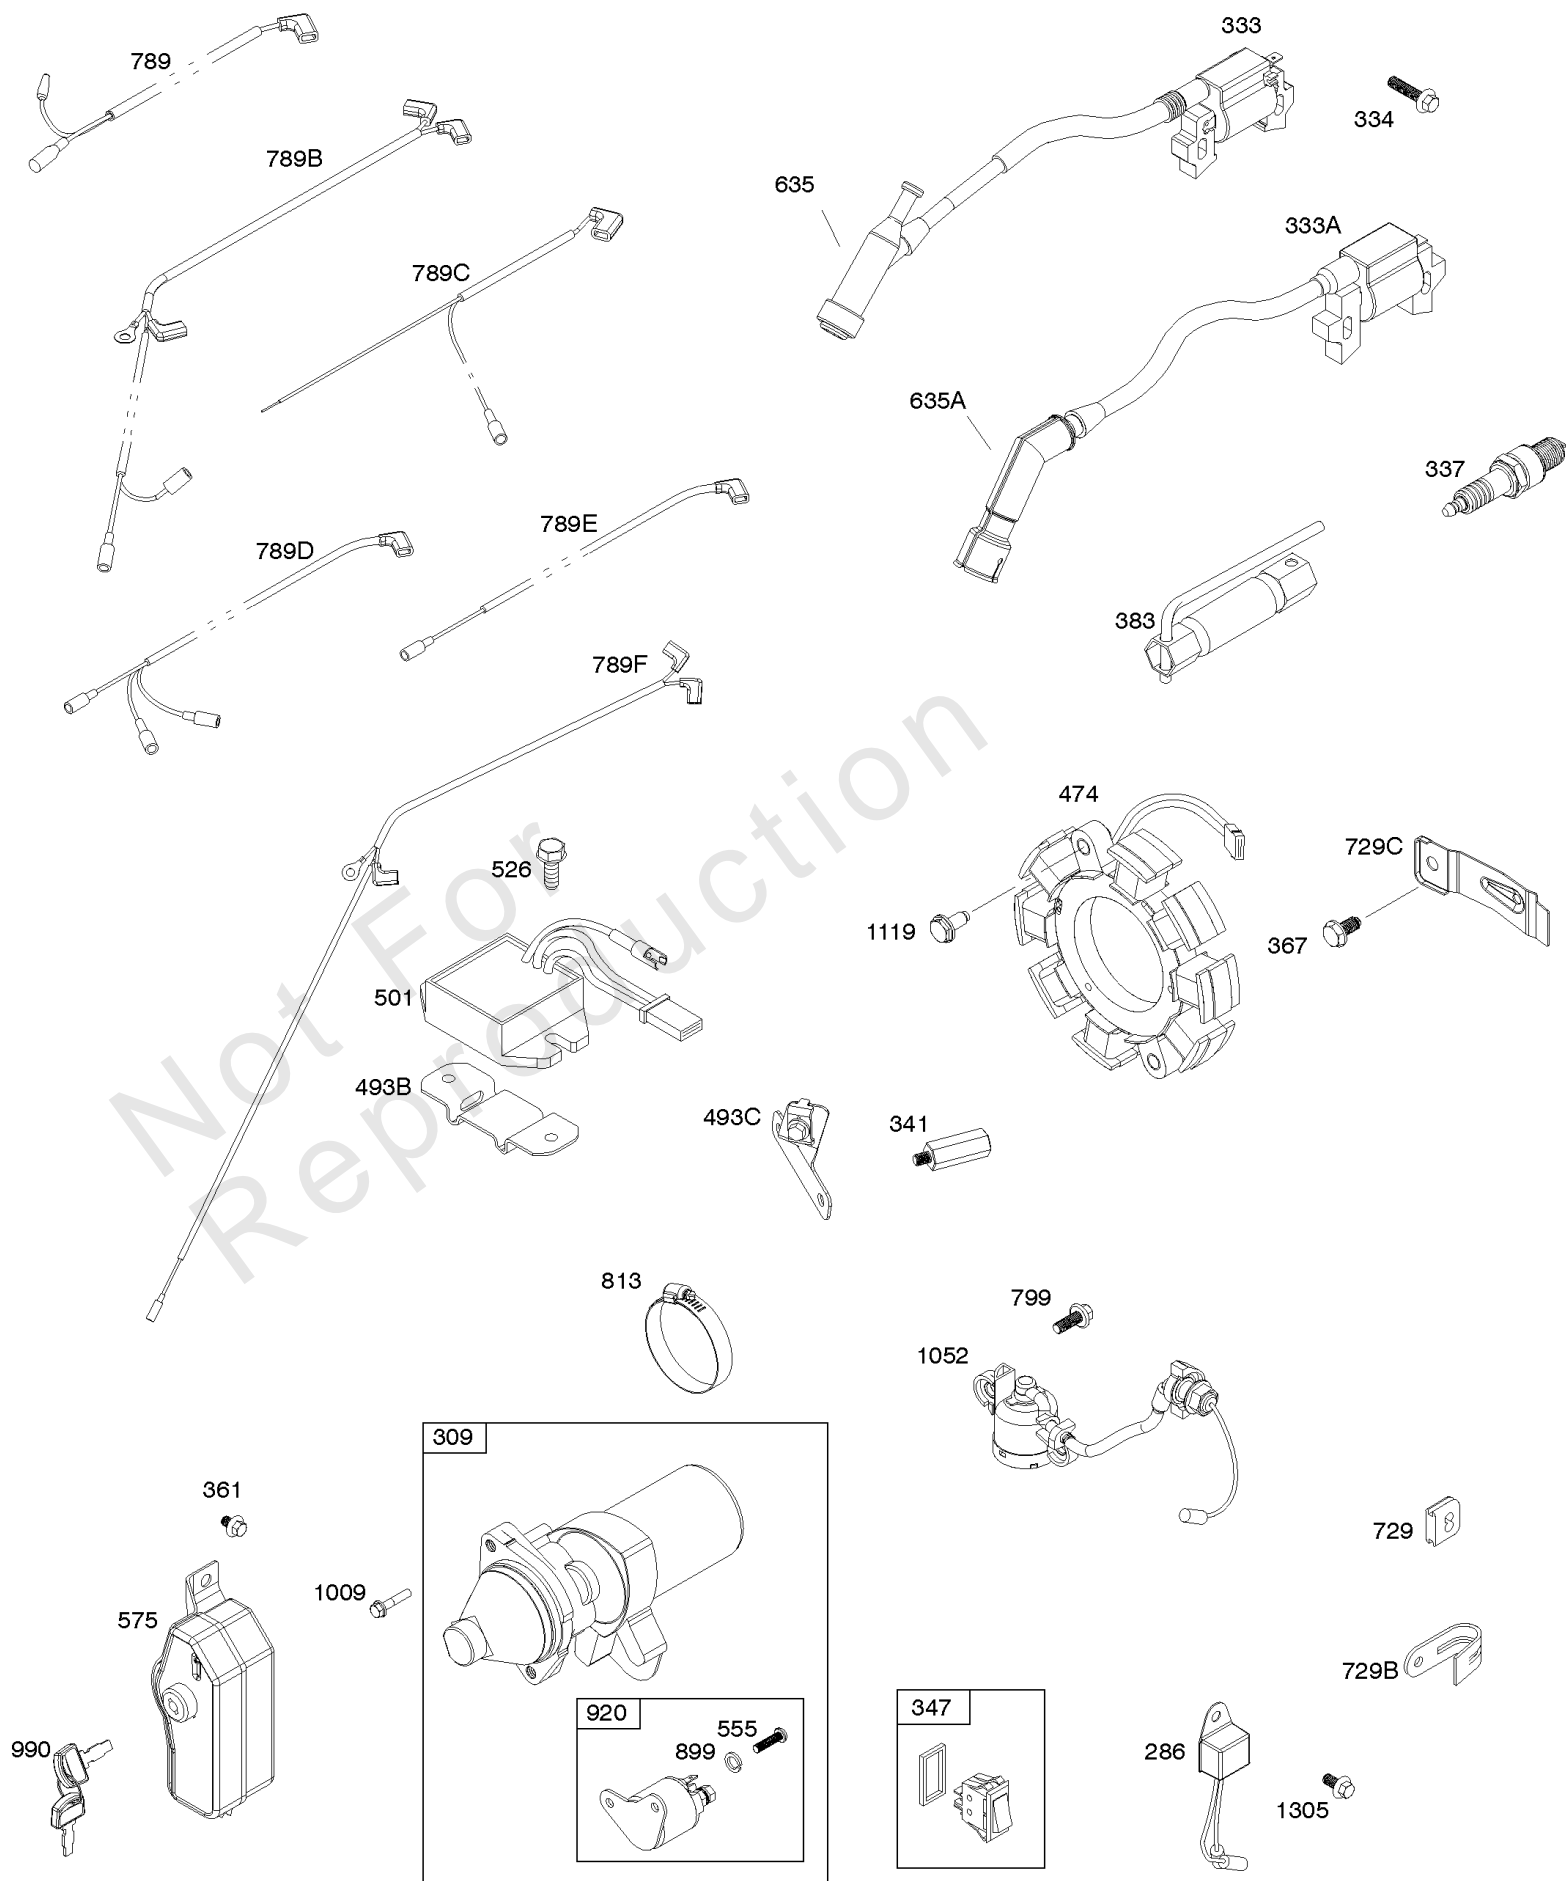 

Alternator Group

REF NO	PART NO	QTY	DESCRIPTION
286	797772		MODULE, Oil Sensor
309	591780		MOTOR, Starter
333	797769		ARMATURE, Magneto
333A	798616		ARMATURE, Magneto
334	797655		SCREW -(Magneto Armature)
337	798615		PLUG, Spark
341	591341		STUD -(Mounting Bracket)
347	797340		SWITCH, Rocker
361	798618		SCREW -(Starting Switch)
367	798618		SCREW -(Wire Clip)
383	19576S		WRENCH, Spark Plug
474	591100		ALTERNATOR
493B	691177		BRACKET, Mounting
493C	591342		BRACKET, Mounting
501	845907		REGULATOR
526	690297		SCREW -(Regulator)
555	799532		SCREW -(Starter Solenoid)
575	593734		SWITCH, Starting
635	797658		BOOT, Spark Plug
635A	797685		BOOT, Spark Plug
729	797750		CLIP, Wire
729B	592311		CLIP, Wire
729C	593137		CLIP, Wire
789	797856		HARNESS, Wiring
799	798975		SCREW -(Oil Sensor)
813	590392		CLAMP
899	799642		WASHER -(Starter Solenoid)
920	799481		SOLENOID, Starter
990	590996		SET, Key
1009	593136		SCREW -(USE REFERENCE 697 ONLY)
1052	797771		SENSOR, Oil
1119	799845		SCREW -(Alternator)
1305	798618		SCREW -(Oil Sensor Module)

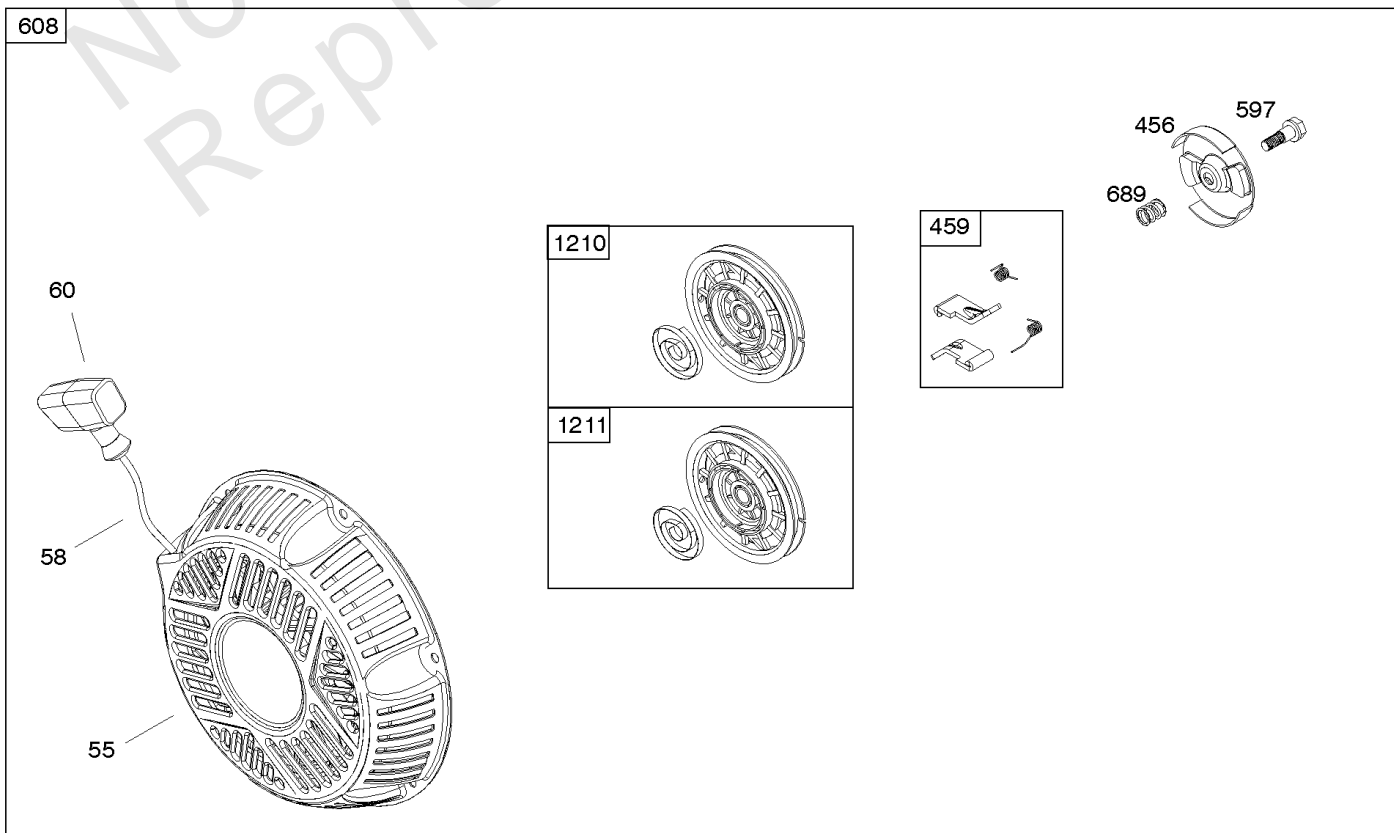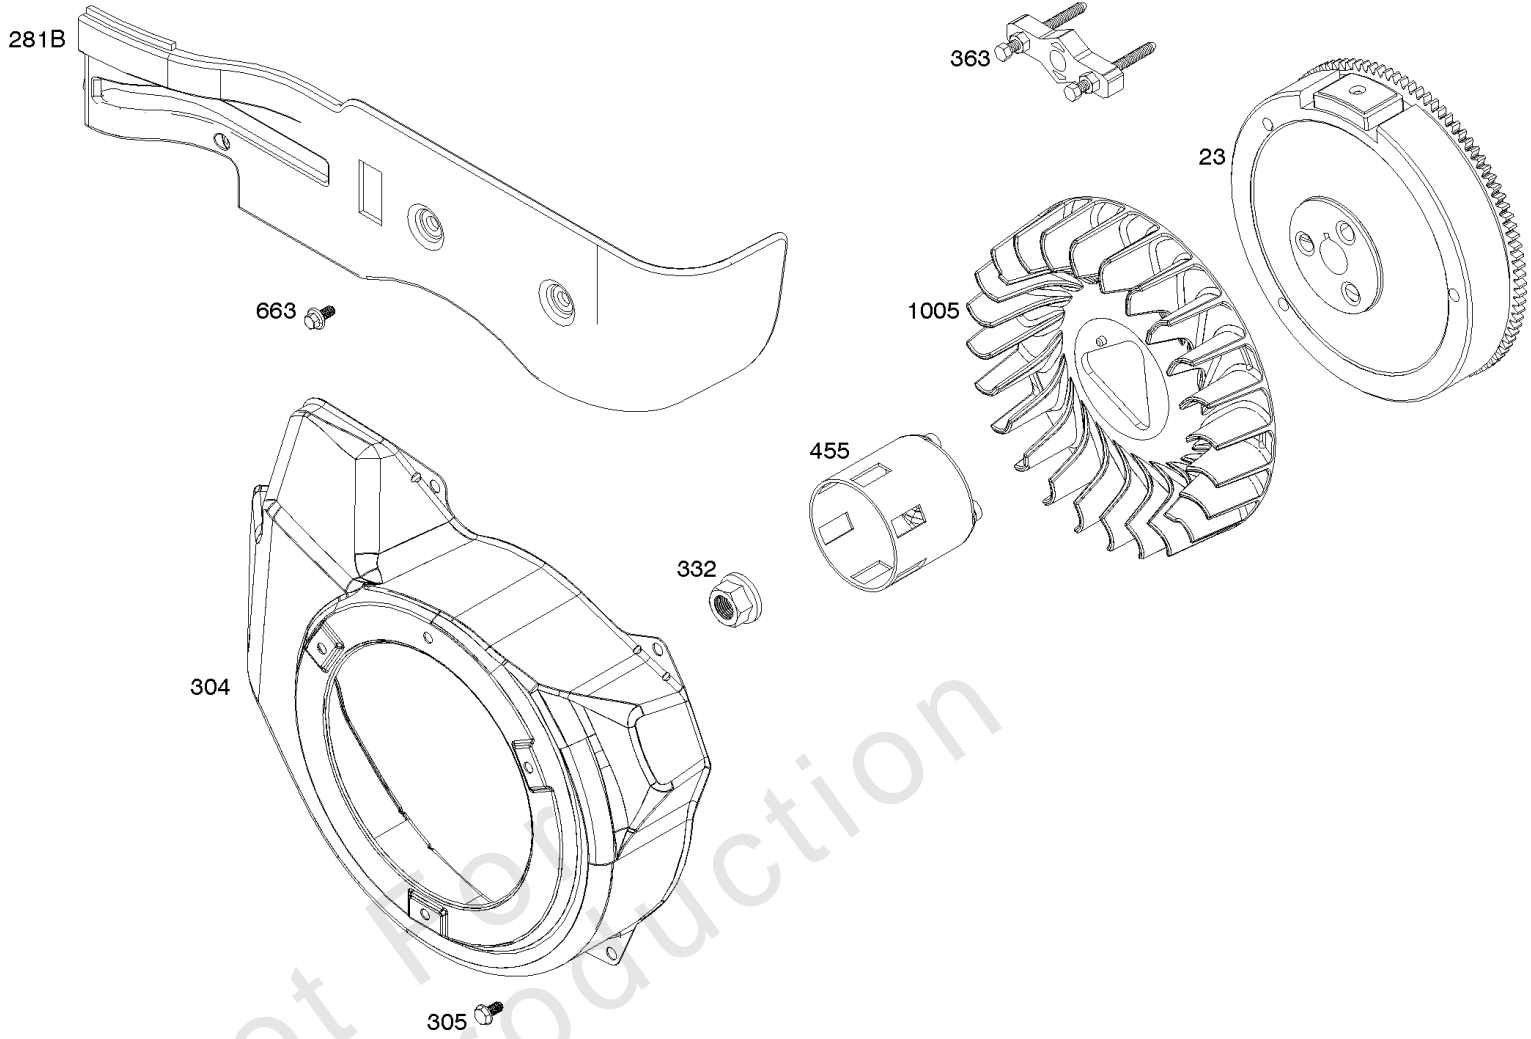  

Blower Housing, Flywheel, Rewind Starter














REF NO	PART NO	QTY	DESCRIPTION
23	593139		FLYWHEEL
55	591787		HOUSING, Rewind Starter
58	691921		ROPE, Starter -(Cut To Required Length)
60	691915		GRIP, Starter Rope
65	797654		SCREW -(Rewind Starter)
281B	593732		PANEL, Control
304	591785		HOUSING, Blower
305	798618		SCREW -(Blower Housing)
332	797811		NUT -(Flywheel)
363	19203		PULLER, Flywheel
455	591820		CUP, Flywheel
456	799973		PLATE, Pawl Friction
459	799976		PAWL, Ratchet
597	799972		SCREW -(Pawl Friction Plate)
608	591781		STARTER, Rewind
663	799846		SCREW -(Control Panel)
689	799669		SPRING, Friction
1005	591789		FAN, Flywheel
1210	591788		PULLEY/SPRING ASSEMBLY -(Pulley)
1211	591788		PULLEY/SPRING ASSEMBLY -(Spring)

1036 EMISSIONS LABEL

1058 OPERATOR'S MANUAL

1319 WARNING LABEL

             1319A WARNING LABEL

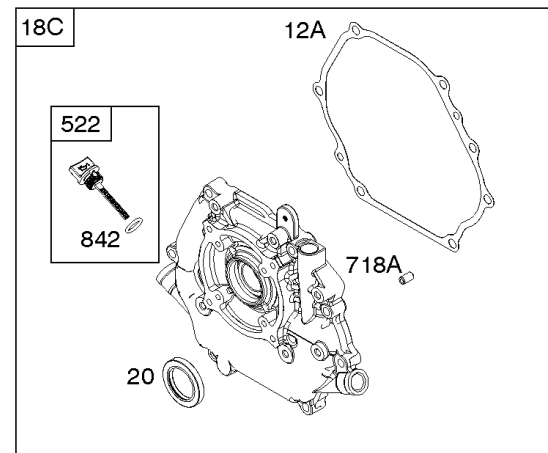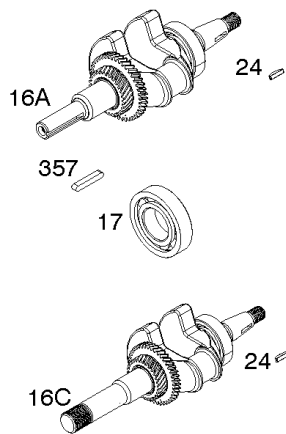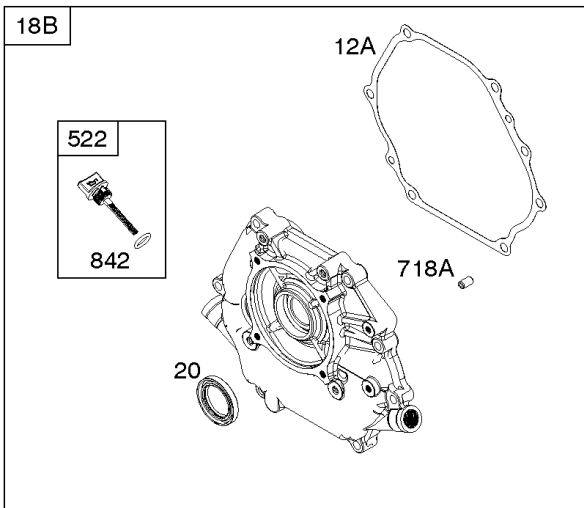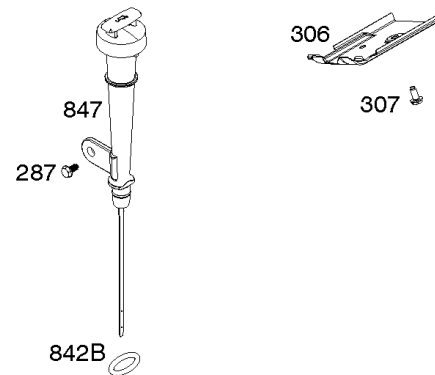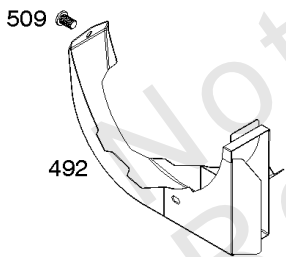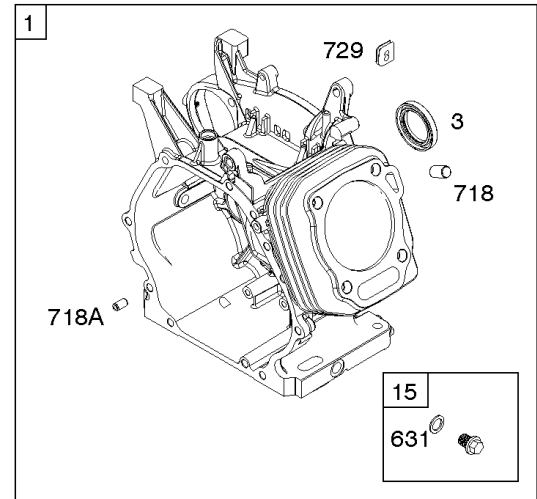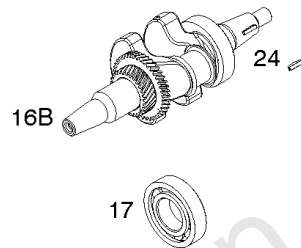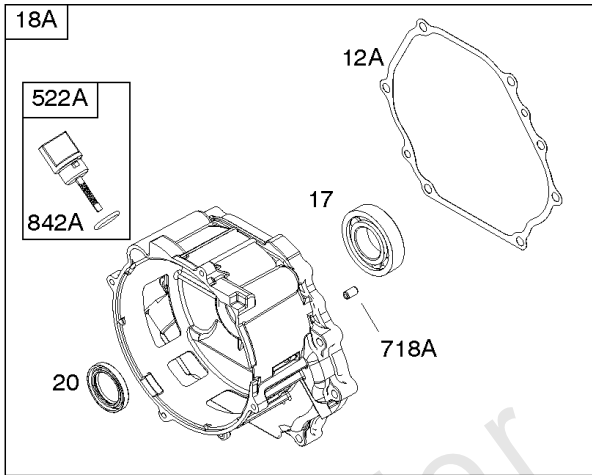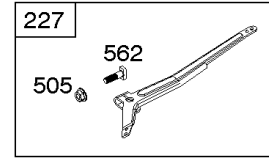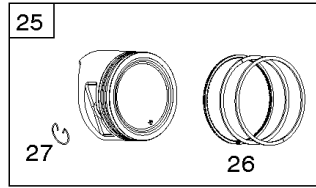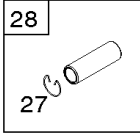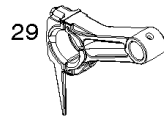

Camshaft, Crankcase Cover, Crankshaft, Cylinder, Exhaust Bracket, Operator's Manual,















REF NO	PART NO	QTY	DESCRIPTION
1	593736		CYLINDER ASSEMBLY
3	591794		SEAL, Oil -(Magneto Side)
12A	592597		GASKET, Crankcase
15	797793		PLUG, Oil Drain
16A	593662		CRANKSHAFT
17	591792		BEARING, Ball -(Crankshaft)
18C	593661		COVER, Crankcase
20	591793		SEAL, Oil -(PTO Side) (PTO Side)
22	797776		SCREW -(Crankcase Cover/Sump)
22A	593107		SCREW -(Crankcase Cover/Sump)
24	797812		KEY, Flywheel
25	592613		PISTON ASSEMBLY -(Standard)
25	593108		PISTON ASSEMBLY -(.010" Oversize)
25	593109		PISTON ASSEMBLY -(.020" Oversize)
26	593111		SET, Ring -(.020" Oversize)
26	592614		SET, Ring -(Standard)
26	593110		SET, Ring -(.010" Oversize)
27	592044		LOCK, Piston Pin
28	592045		PIN, Piston
29	592046		ROD, Connecting
46	595929		CAMSHAFT -Used After Code Date 15061400
46	592617		CAMSHAFT -Used Before Code Date 15061500
227	592616		LEVER, Governor Control
287	798618		SCREW -(Dipstick Tube)
306	591790		SHIELD, Cylinder
307	798618		SCREW -(Cylinder Shield)
309	591780		MOTOR, Starter
357	590960		KEY, Drive Pulley
492	592037		SHIELD, Crankcase
505	690939		NUT -(Governor Control Lever)
509	798840		SCREW -(Crankcase Shield)
522	799941		PLUG, Dipstick/Fill
522A	797762		PLUG, Dipstick/Fill
562	797230		BOLT -(Governor Control Lever)
614	797229		PIN, Cotter
616	592615		CRANK, Governor
631	797794		WASHER -(Oil Drain Plug)
718	797792		PIN, Locating

1036 EMISSIONS LABEL

1058 OPERATOR'S MANUAL

1319 WARNING LABEL

         
 
 
 
 
 
1319A WARNING LABEL

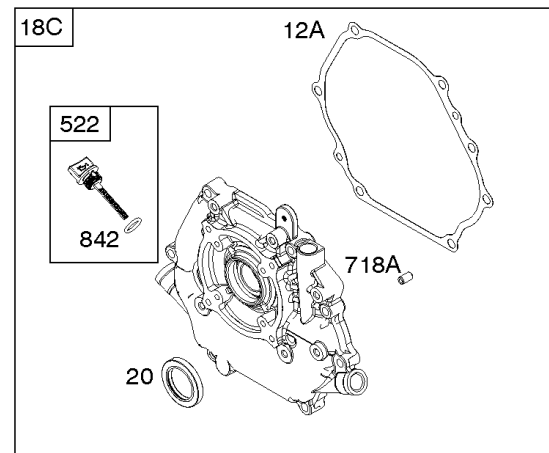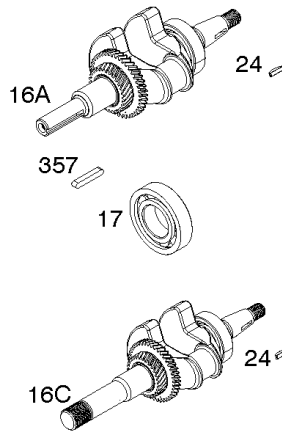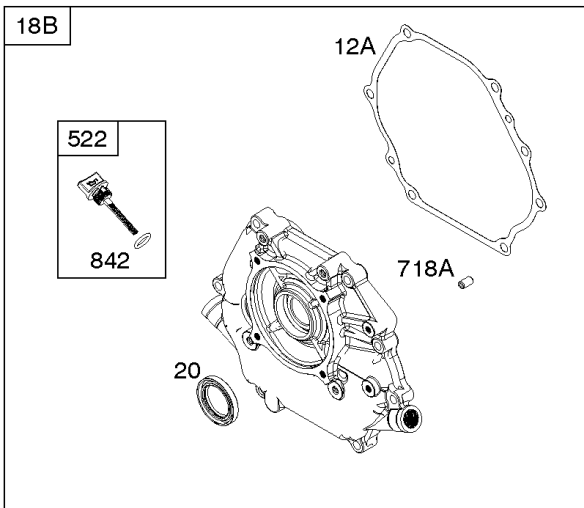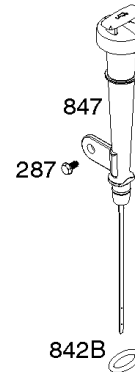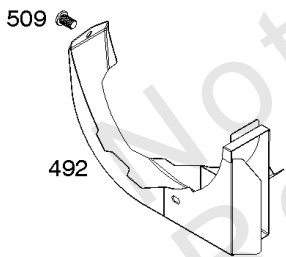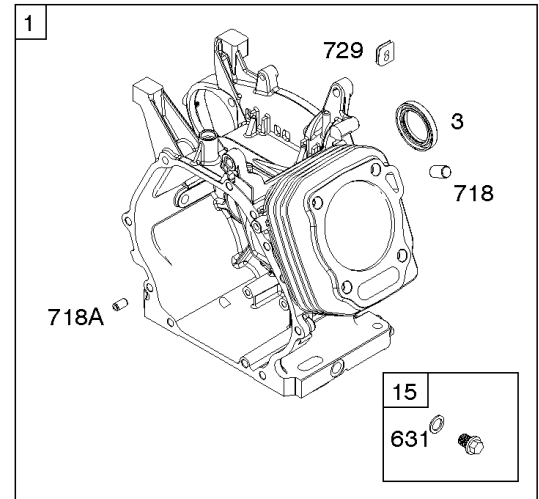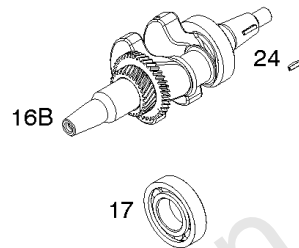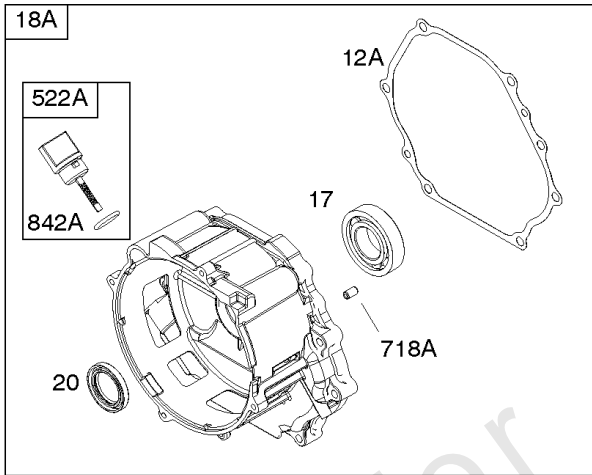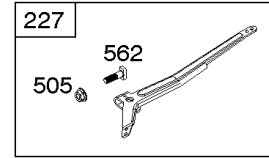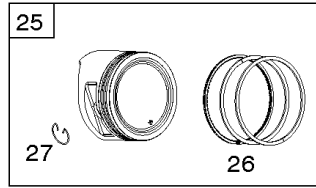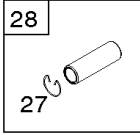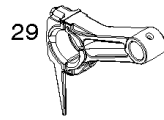

Camshaft, Crankcase Cover, Crankshaft, Cylinder, Exhaust Bracket, Operator's Manual,

REF NO	PART NO	QTY	DESCRIPTION
718A	797761		PIN, Locating -(Crankcase Cover)
729	797750		CLIP, Wire
842	797327		SEAL, O-Ring -(Dipstick Tube)
842A	797763		SEAL, O-Ring -(Dipstick Tube)
842B	691031		SEAL, O-Ring -(Dipstick Tube)
847	593174		DIPSTICK/TUBE ASSEMBLY
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1058	279127ZH		MANUAL, Operator's
1058	80006756EST		MANUAL, Operator's
1058	80006756WST		MANUAL, Operator's
1058	80006756USCN		MANUAL, Operator's
1319	794467		LABEL, Warning
1319A	797669		LABEL, Warning

 
 
 
 
 
 
Not For Reproduction

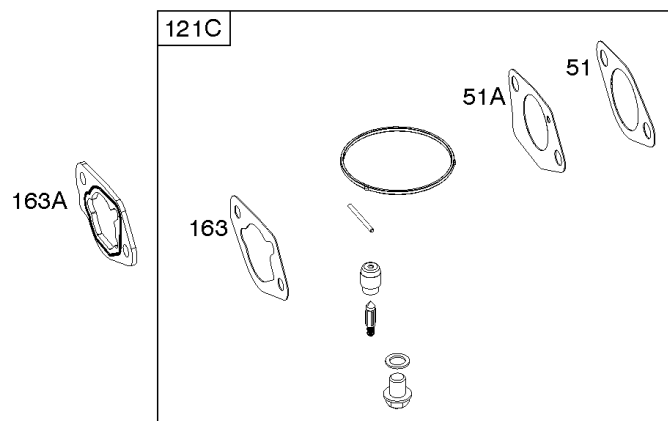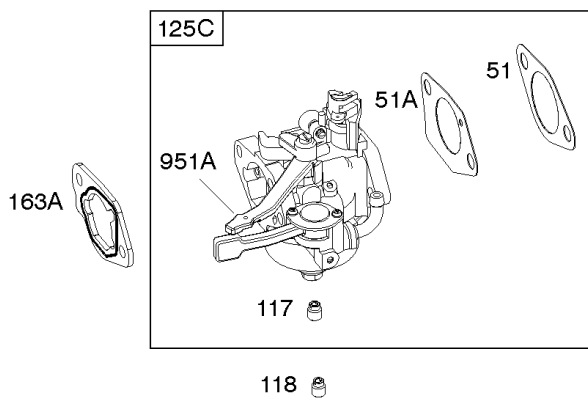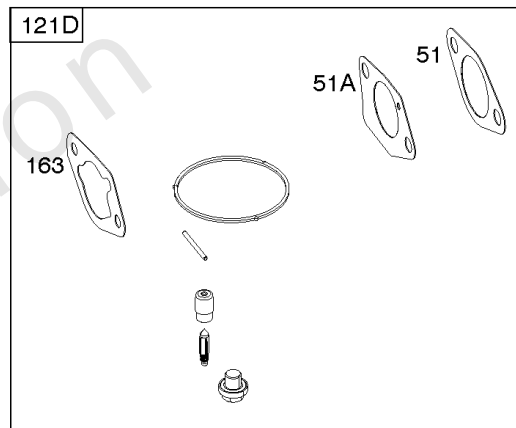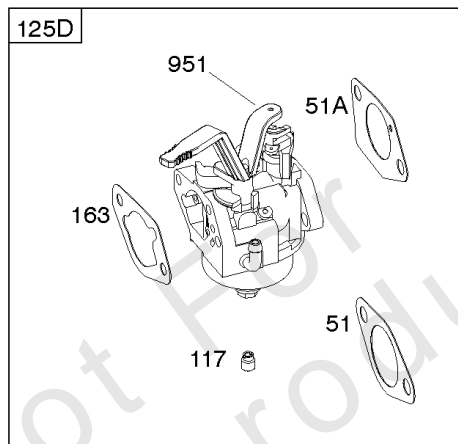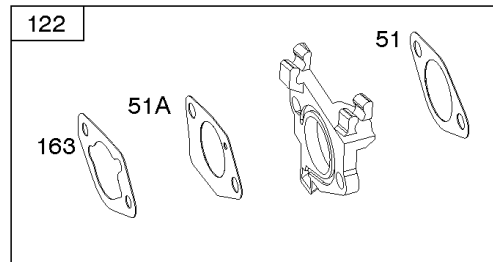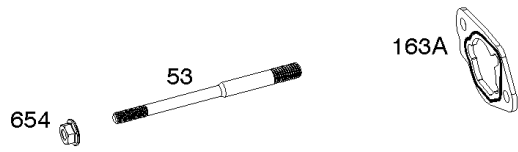

Carburetor





REF NO	PART NO	QTY	DESCRIPTION
51	591779		GASKET, Intake
51A	591798		GASKET, Intake
53	590390		STUD -(Carburetor)
117	592598		JET, Main -(Standard)
118	594713		JET, Main -(High Altitude)
121C	592229		KIT, Carburetor Overhaul
121D	593133		KIT, Carburetor Overhaul
122	591797		SPACER, Carburetor
125C	592594		CARBURETOR
163	797756		GASKET, Air Cleaner
163A	799883		GASKET, Air Cleaner
654	690939		NUT -(Carburetor)
951A	593102		LEVER, Choke

      Not For Reproduction

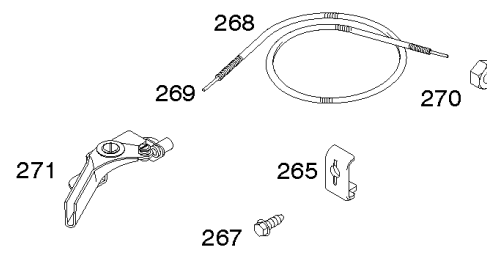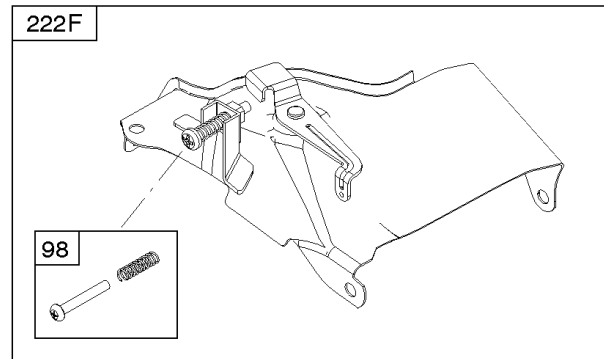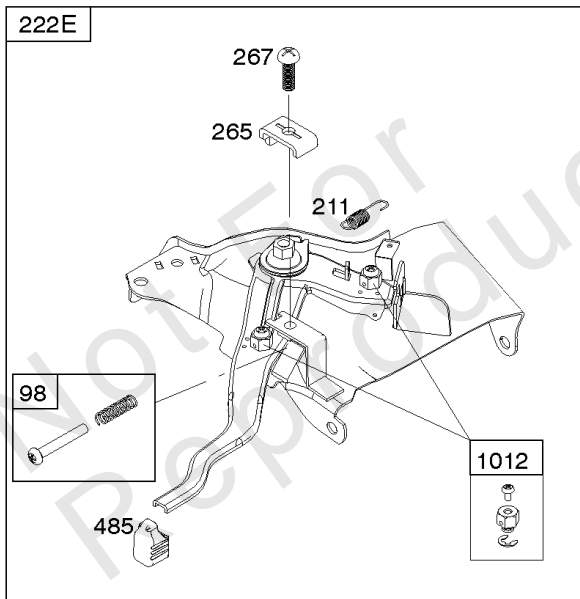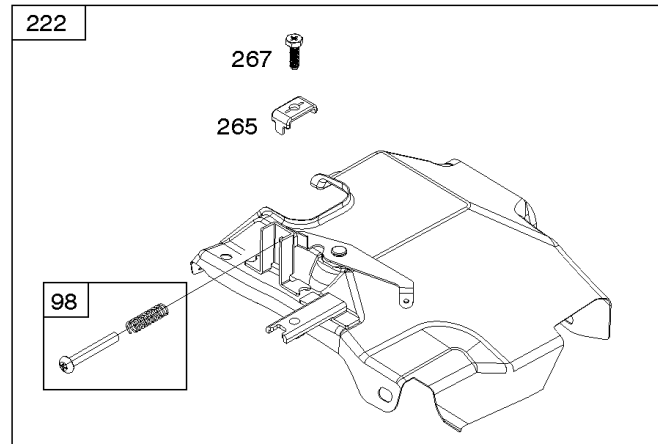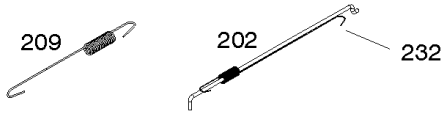






















Controls, Governor Spring

REF NO	PART NO	QTY	DESCRIPTION
98	592978		KIT, Idle Speed
188	798618		SCREW -(Control Bracket)
202	591834		LINK, Mechanical Governor
209	797843		SPRING, Governor
211	799927		SPRING, Governed Idle
222	591810		BRACKET, Control
222E	593105		BRACKET, Control
232	797809		SPRING, Governor Link
265	691024		CLAMP, Casing
267	699492		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
485	797339		KNOB, Control
621	692310		SWITCH, Stop
1012	590378		RETAINER, Link

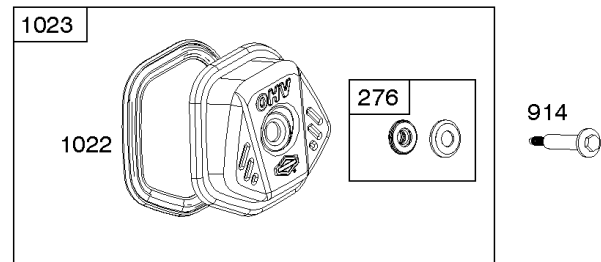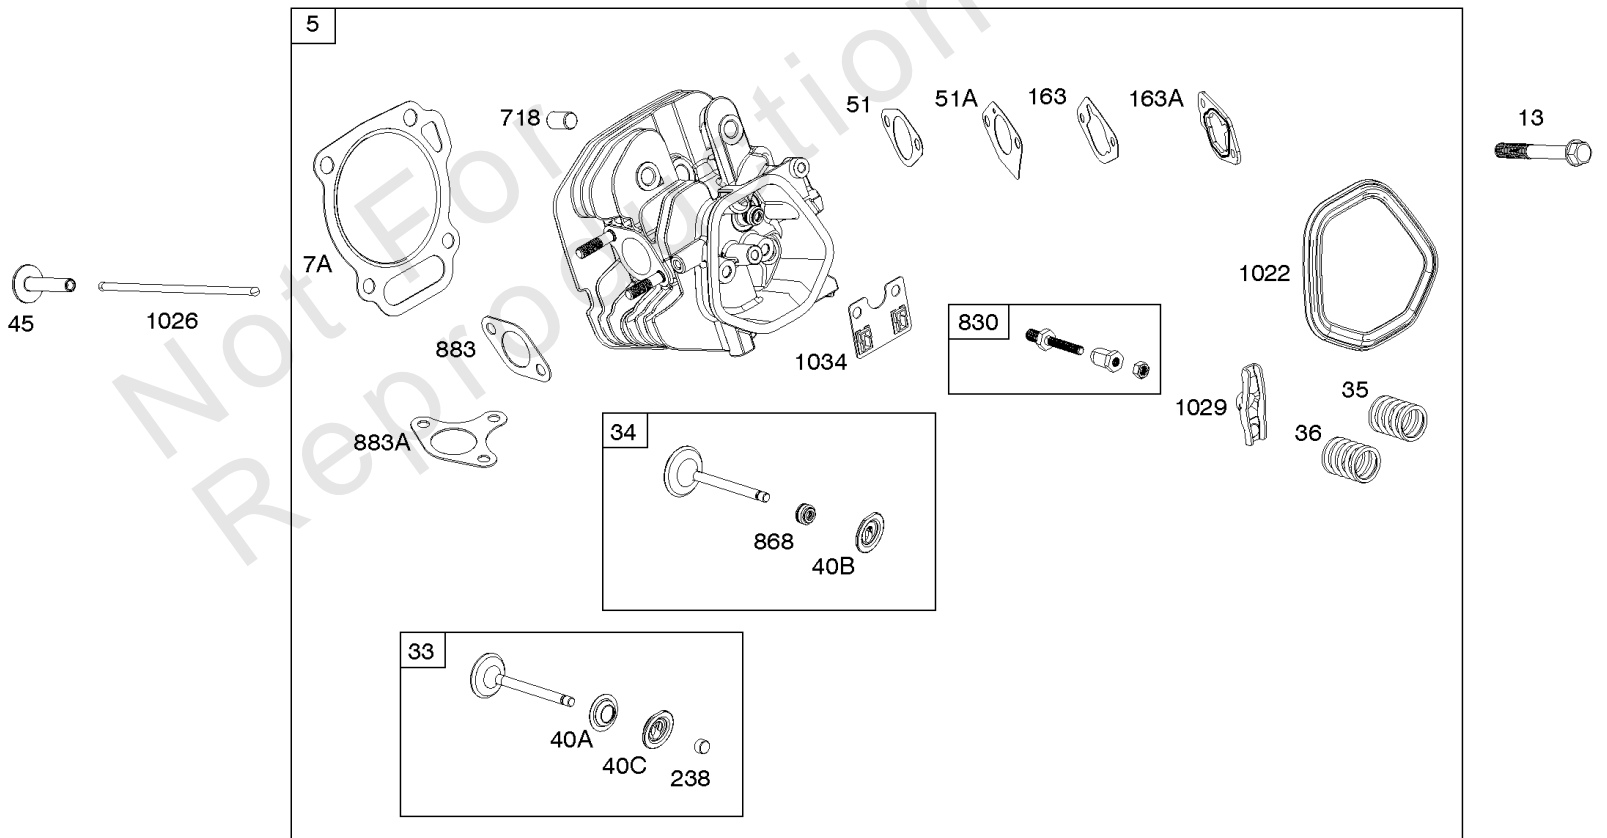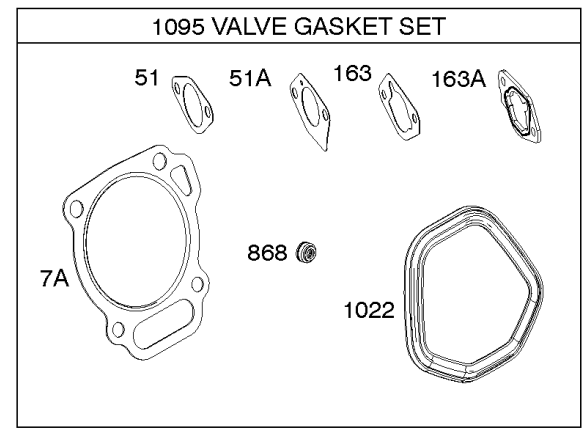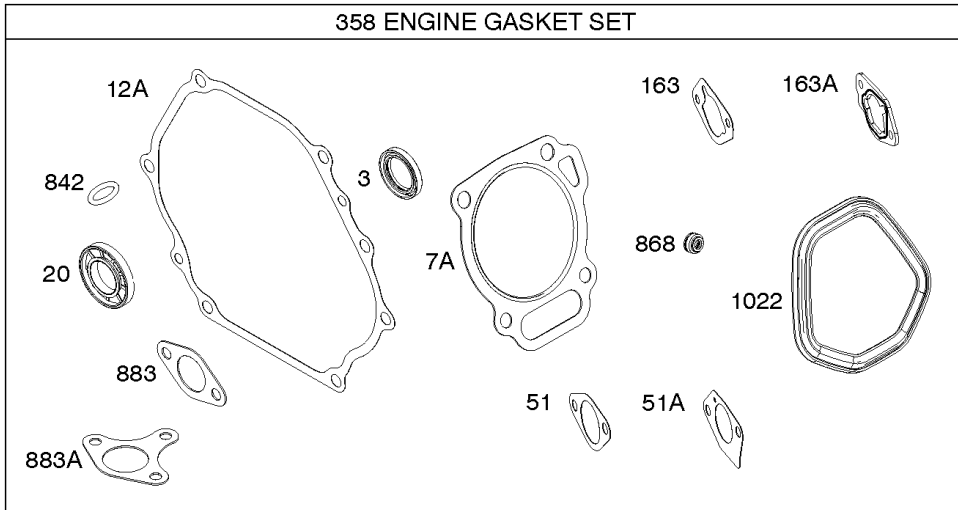    

Cylinder Head, Gasket Sets

REF NO	PART NO	QTY	DESCRIPTION
3	591794		SEAL, Oil -(Magneto Side)
5	593093		HEAD, Cylinder
7A	592834		GASKET, Cylinder Head
12A	592597		GASKET, Crankcase
13	797791		SCREW -(Cylinder Head)
20	591793		SEAL, Oil -(PTO Side) (PTO Side)
33	592612		VALVE, Exhaust
34	592611		VALVE, Intake
35	591814		SPRING, Valve -(Intake)
36	591814		SPRING, Valve -(Exhaust)
40A	797782		RETAINER, Valve
40B	591815		RETAINER, Valve
40C	591816		RETAINER, Valve
45	797786		TAPPET, Valve
51	591779		GASKET, Intake
51A	591798		GASKET, Intake
163	797756		GASKET, Air Cleaner
163A	799883		GASKET, Air Cleaner
238	591817		CAP, Valve
276	797847		WASHER, Sealing -(Rocker Cover)
358	593112		GASKET SET, Engine
718	797792		PIN, Locating
830	591088		STUD, Rocker Arm
842	797327		SEAL, O-Ring -(Dipstick Tube)
868	797854		SEAL, Valve -(Intake)
883	797770		GASKET, Exhaust
883A	799797		GASKET, Exhaust
914	797848		SCREW -(Rocker Cover)
1022	797846		GASKET, Rocker Cover
1023	799778		COVER, Rocker
1026	591818		ROD, Push
1029	591087		ARM, Rocker
1034	591819		GUIDE, Push Rod
1095	593113		GASKET SET, Valve

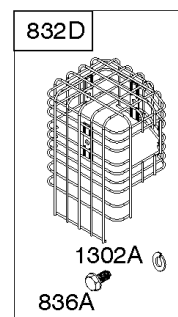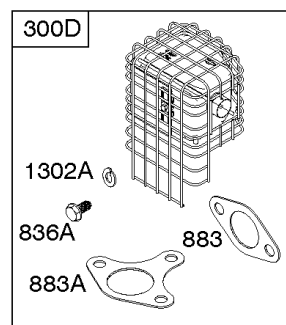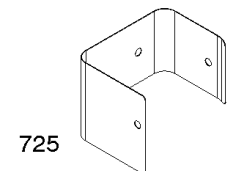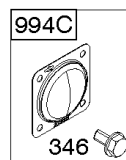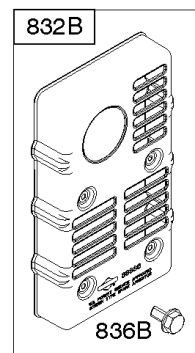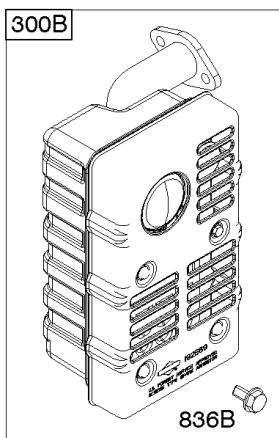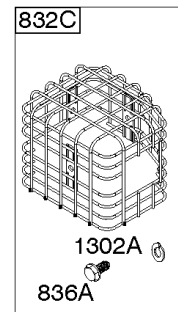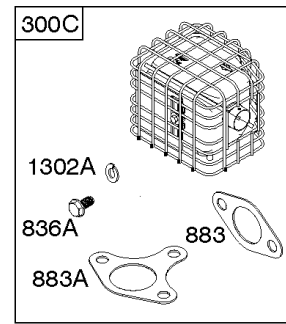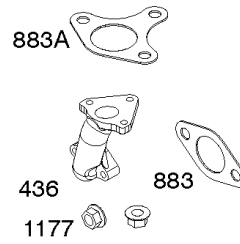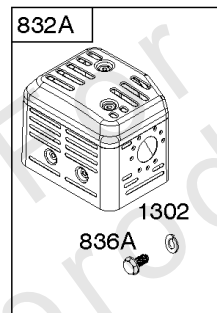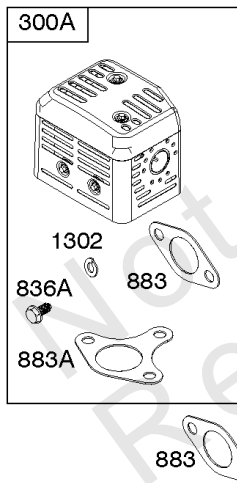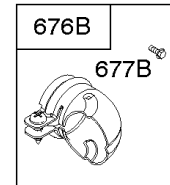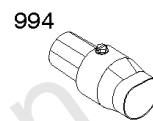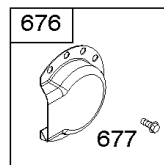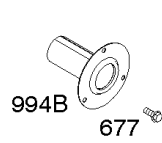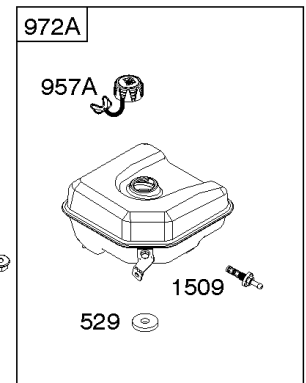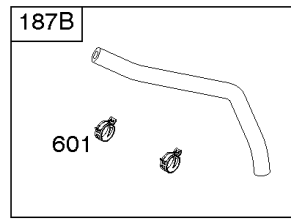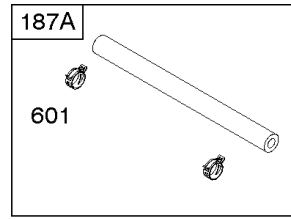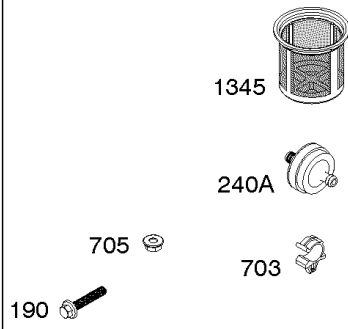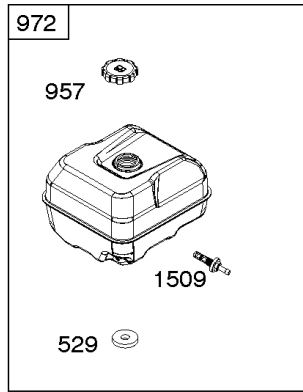                     

Exhaust System, Fuel Supply

REF NO	PART NO	QTY	DESCRIPTION
187B	593721		LINE, Fuel
190	590964		SCREW -(Fuel Tank)
240A	394358S		FILTER, Fuel
300A	593090		MUFFLER
300B	192569GS		MUFFLER
300D	593128		MUFFLER
346	B5763GS		SCREW -(10-32 x 3/8) (Spark Arrestor)
436	593089		MANIFOLD, Exhaust
529	799933		GROMMET -(Fuel Tank)
601	791850		CLAMP, Hose
676	590953		DEFLECTOR, Muffler
676B	697816		DEFLECTOR, Muffler
677	699203		SCREW -(Muffler Deflector)
677B	699776		SCREW -(Muffler Deflector)
703	590967		CLIP -(Fuel Hose)
705	590965		NUT -(Fuel Tank)
725	595432		SHIELD, Heat
819	798618		SCREW -(Muffler Bracket)
832A	593091		GUARD, Muffler
832B	595453		MUFFLER
832D	595434		GUARD, Muffler
832C	595433		MUFFLER
836A	798976		SCREW -(Muffler Guard)
836B	595455		SCREW -(Muffler Guard)
863A	593733		BRACKET, Muffler
883	797770		GASKET, Exhaust
883A	799797		GASKET, Exhaust
957	794641		CAP, Fuel Tank
957A	799324		CAP, Fuel Tank
972	593095		TANK, Fuel
972A	593720		TANK, Fuel
994	790153		ARRESTOR, Spark
994A	594233		ARRESTOR, Spark
994B	796399		ARRESTOR, Spark
994C	595454		ARRESTOR, Spark
1177	590965		NUT -(Muffler)
1302	590457		WASHER -(Muffler Guard)
1302A	593727		WASHER -(Muffler Guard)
1345	792917		FILTER, Filler Neck
1509	797346		OUTLET, Tank

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	19N1370053	1	Replacement Engine
	-----		Top No-Load Speed: 3600 -Trim: ALLF1

Not For Reproduction

